

Module	Content
<b>Project Manager</b>	<ul style="list-style-type: none"> <li>▪ Create New Projects</li> <li>▪ Related Files</li> <li>▪ Create Shortcuts</li> <li>▪ Archiving Projects</li> </ul>
<b>Specification Manager</b>	<ul style="list-style-type: none"> <li>▪ Overview</li> <li>▪ Terminology</li> <li>▪ Navigating Library versus Specs</li> <li>▪ Units and Refresh</li> <li>▪ Status of Values</li> <li>▪ Create Like</li> <li>▪ Add Types, Groups, Components</li> <li>▪ Customizing Material, Manufacturer</li> <li>▪ Customizing Description</li> </ul>
<b>3D Modeler: Introduction</b>	<ul style="list-style-type: none"> <li>▪ Checkout Design <ul style="list-style-type: none"> <li>- Project</li> <li>- Designs</li> <li>- New Design</li> </ul> </li> <li>▪ Modules <ul style="list-style-type: none"> <li>- ANSI Piping</li> <li>- ASME Piping</li> <li>- Equipment</li> <li>- Shared Components</li> <li>- Structural Steel</li> </ul> </li> <li>▪ Spec</li> <li>▪ Main Size</li> <li>▪ Branch Size</li> <li>▪ Line No.</li> </ul>
<b>3D Modeler: Equipment &amp; Placing Components</b>	<ul style="list-style-type: none"> <li>▪ Creating Equipment</li> <li>▪ Linear Components</li> <li>▪ Connection Cones</li> <li>▪ Items on Other Components (i.e. O-lets)</li> <li>▪ Example of rules</li> <li>▪ Testing menu items</li> </ul>
<b>3D Modeler: Changes</b>	<ul style="list-style-type: none"> <li>▪ Erase</li> <li>▪ Break</li> <li>▪ Stretch</li> <li>▪ Pickup Component Attributes</li> <li>▪ Copy</li> <li>▪ Move</li> <li>▪ Rotate</li> <li>▪ Clone</li> <li>▪ Reconnect</li> <li>▪ Change Line Number</li> </ul>

Module	Content
<b>3D Modeler:</b>  <b>Auto Features</b>	<ul style="list-style-type: none"> <li>▪ Place Relative Toggle</li> <li>▪ AutoRoute Toggle</li> </ul>
<b>3D Modeler:</b>  <b>Utilities</b>	<ul style="list-style-type: none"> <li>▪ Viewing Planes</li> <li>▪ Shading Modes</li> <li>▪ View by Line / View by Spec</li> </ul>
<b>3D Modeler:</b>  <b>System Toggles</b>	<ul style="list-style-type: none"> <li>▪ Toggle System Messages ON/OFF</li> </ul>
<b>3D Modeler:</b>  <b>Output</b>	<ul style="list-style-type: none"> <li>▪ Creating PCF File Export</li> <li>▪ Make Orthographic Drawings</li> <li>▪ Open ORTHO</li> <li>▪ Section Views</li> </ul>
<b>3D Modeler:</b>  <b>Database Tools</b>	<ul style="list-style-type: none"> <li>▪ Regenerate Drawing from the Database</li> <li>▪ Synchronize Database from Drawing</li> </ul>
<b>BOM Settings Manager</b>	<ul style="list-style-type: none"> <li>▪ Layout</li> <li>▪ Sorting</li> <li>▪ Numbering</li> <li>▪ Fonts</li> <li>▪ CAD Sizes</li> </ul>
<b>BOM Generator</b>	<ul style="list-style-type: none"> <li>▪ By Project</li> <li>▪ By Design</li> <li>▪ By Line</li> <li>▪ Filter By System</li> </ul>
<b>License Manager</b>	<ul style="list-style-type: none"> <li>▪ License Activation</li> <li>▪ License Return</li> </ul>