

Application	Content	
Standards Manager	<ul style="list-style-type: none"> ▪ Creating New Standards ▪ File Locations and Drawing Management ▪ Relationship with the Drawing Manager 	<ul style="list-style-type: none"> ▪ Filtering Specifications ▪ Multiple Block Locations ▪ Layers and the AutoCAD Layer Manager ▪ Importing and Exporting Standards
Spec Generator	<ul style="list-style-type: none"> ▪ Creating New Specs ▪ General Parameters and Interconnection to Drafting applications and BOMs ▪ Importing and Export Specs 	<ul style="list-style-type: none"> ▪ Customizing Material Information ▪ Customized Rating Display ▪ Branch Fittings Table ▪ Wall Thickness Table
BOM Settings Manager	<ul style="list-style-type: none"> ▪ Updating data columns ▪ Changing groups of components 	<ul style="list-style-type: none"> ▪ Changing numbering ▪ Sorting options ▪ Cut Length vs Total Length
ORTHO	<ul style="list-style-type: none"> ▪ Navigating the Toolbox ▪ Double and Single Line Drafting ▪ Scale Factors ▪ Adding Equipment and Piping 	<ul style="list-style-type: none"> ▪ AutoRoute ▪ Dimensioning ▪ BOM generation ▪ Resolving errors and making corrections ▪ Overrides
User Settings Manager	<ul style="list-style-type: none"> ▪ Changing AutoCAD versions ▪ AutoCAD Profile 	<ul style="list-style-type: none"> ▪ Snap/Grid Setting ▪ 4K Monitor Support (menu icon size)
Setup Maintenance	<ul style="list-style-type: none"> ▪ Changing Program/Application Location 	<ul style="list-style-type: none"> ▪ Datafile path locations
License Manager	<ul style="list-style-type: none"> ▪ License Activation 	<ul style="list-style-type: none"> ▪ License Return

NOTES: