


### Can't Find Spec or Standards?

When you open Standards Manager or Spec Generator, you should typically see the generic specs and standards supplied by PROCAD. If you do not, it means there is a permissions issue.

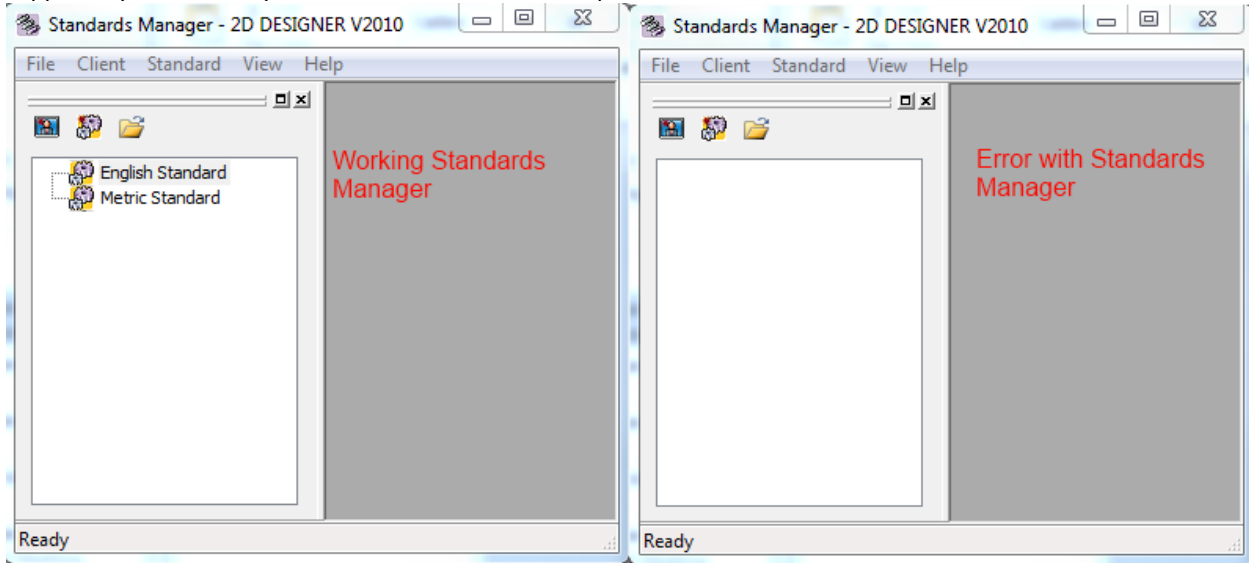

#### **Solution:**

1. First, check to see that the user has read permission for the data-file directory. All users should have read permission for that folder, but not all users need write permission. You should assign write permissions to users that are authorized to edit or create new specs or standards.
2. Next, check the data-file path that is created when you install any of the 2D software packages:  
C:\ProgramData\PROCAD\2D DESIGNER V2010\  
If this path has been changed during installation or after, you can find the correct location of the datafiles by running the Setup Maintenance application.