

Software Setup

Please follow the steps below to setup your PROCAD software:

1. Download

1. If you already downloaded and installed the software, skip to **Activate**.
2. Download the product you acquired:
 - [PROCAD+](#) products which include built-in AutoCAD OEM.
 - [Standard PROCAD](#) add-on products to your existing AutoCAD.
3. After the download is complete, locate the ZIP file on your computer's hard drive and extract its files.

2. Install

1. In the folder where the ZIP file was extracted to, find and click on **autorun.exe**.
2. Select the license type installation option (**Express or Advanced Installation**) and follow the instructions on your screen.
3. For detailed installation instructions, refer to the **Installation Guide** found in the extracted ZIP folder.
4. Install the software.

3. Activate

1. Within one business day, you will receive an email containing your PROCAD's **Activation Codes**.
2. For **Standalone Licenses**, run the License Manager found in the PROCAD folder on your desktop.
3. For **Network Licenses**, run the License Manager found in the PROCAD folder on the server assigned to host PROCAD licenses.
4. From the menu, select **License Activation** and select **Activate License**.
5. Copy the **Activation Code** from the email and paste it into the activation dialog box.
6. Click on the **Activate** button to install the license. Your PROCAD software is now ready for use.

Please contact PROCAD [tech support](#) should you need any assistance with software setup. You can also call us at 403.216.3375 and press 2.

To get the most out of your software, view [PROCAD's Free Tutorials](#).

By telephone (403) 216-3375
By email support@procad.com or sales@procad.com