

Application	Content	
Standards Manager	<ul style="list-style-type: none"> ▪ Creating New Standards ▪ File Locations and Drawing Management ▪ Relationship with the Drawing Manager 	<ul style="list-style-type: none"> ▪ Filtering Specifications ▪ Multiple Block Locations ▪ Layers and the AutoCAD OEM Layer Manager ▪ Importing and Exporting Standards
Spec Generator	<ul style="list-style-type: none"> ▪ Creating New Specs ▪ General Parameters and Interconnection to Drafting applications and BOMs ▪ Importing and Export Specs 	<ul style="list-style-type: none"> ▪ Customizing Material Information ▪ Customized Rating Display ▪ Branch Fittings Table ▪ Wall Thickness Table ▪ Diameter-Inch Variables
Shop Settings Manager	<ul style="list-style-type: none"> ▪ Weld Settings ▪ Weld List Configuration ▪ Weld Gap Tables ▪ Weld Count Configuration 	<ul style="list-style-type: none"> ▪ Pipe End Preparation ▪ Component Weights ▪ Cost Codes
SPOOLCAD Application	<ul style="list-style-type: none"> ▪ Navigating the Toolbox ▪ INFO blocks ▪ Dimensional files ▪ Changing Isometric Planes (F5) ▪ Adding Equipment and Piping ▪ AutoRoute ▪ Dimensions (Sub-Dimensions, Offsets, Rolling Offsets) 	<ul style="list-style-type: none"> ▪ BOM generation ▪ Custom Items, Remove Items from BOM ▪ Resolving errors and making corrections ▪ Overrides ▪ Supports ▪ Steel ▪ Annotations
BOM Settings Manager	<ul style="list-style-type: none"> ▪ Updating data columns ▪ Changing groups of components 	<ul style="list-style-type: none"> ▪ Changing numbering ▪ Sorting options ▪ Cut Length vs Total Length
Advantage BOM	<ul style="list-style-type: none"> ▪ Importing IDF/PCF Files 	<ul style="list-style-type: none"> ▪ Generating BOM
Setup Maintenance	<ul style="list-style-type: none"> ▪ Changing AutoCAD version ▪ Proper Update Procedures 	<ul style="list-style-type: none"> ▪ File locations
License Manager	<ul style="list-style-type: none"> ▪ License Activation 	<ul style="list-style-type: none"> ▪ License Return